



HEIGHT ALARM

The height alarm function alerts you when one of the machine components reaches a pre-defined height, which is useful when working indoors or under power lines, for example.

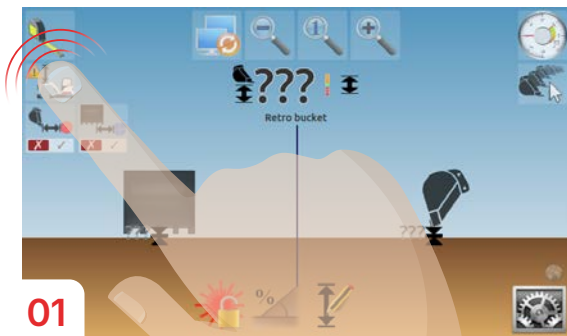


01

Activate the height alarm function by clicking on the specific button.

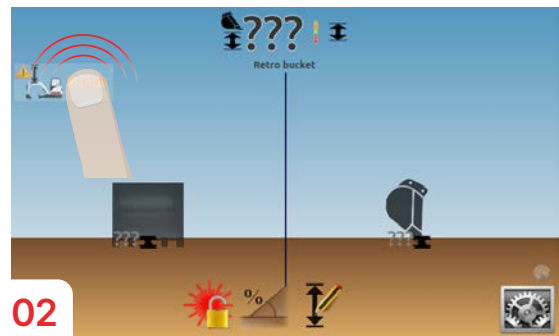

02

Raise one of your components to the maximum height at which the alarm will be triggered. This could be the bucket tip or the boom/arm axis, then click on the value to reset it to zero.

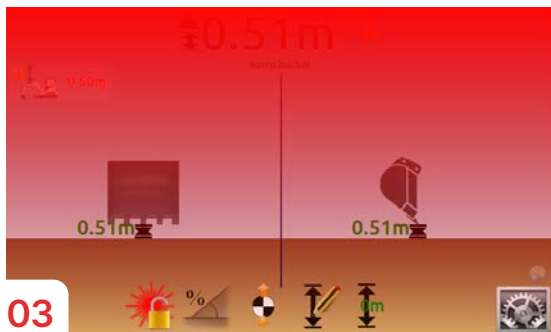

03

When a part of the machine reaches this height, a visual and audible alert will be triggered.